

WINTER FILIGREE

PACK 12367 • 20 DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



HG836_48 Appliqué Cardinal 5.13 X 5.31 in. 130.30 X 134.87 mm 14,157 St. ₩□ L



HG837_48 Appliqué Deer 4.27 X 5.39 in. 108.46 X 136.91 mm 7,995 St. ₩≎ L



HG838_48 Ice Skates Appliqué 4.38 X 5.95 in. 111.25 X 151.13 mm 12,874 St. ₩ L



HG839_48 Mittens Appliqué 3.34 X 4.52 in. 84.84 X 114.81 mm 5,954 St. ♥



HG840_48 Appliqué Sled 4.88 X 4.74 in. 123.95 X 120.40 mm 12,670 St. ₩≎



HG841_48 Jingle Bells Appliqué 2.63 X 2.81 in. 66.80 X 71.37 mm 4,713 St. ♥



HG842_48 Appliqué Tree 2.71 X 3.80 in. 68.83 X 96.52 mm 2,482 St. ♥



HG843_48 Appliqué Trees 4.09 X 4.70 in. 103.89 X 119.38 mm 4,462 St. ♥



HG844_48 Element 1 2.10 X 2.29 in. 53.34 X 58.17 mm 4,115 St. ₩♀



HG845_48 Element 2 3.58 X 2.93 in. 90.93 X 74.42 mm 4,428 St. ♥



HG846_48 Element 33.24 X 2.71 in.
82.30 X 68.83 mm
5,296 St. ♥



HG847_48 Element 4 2.16 X 4.81 in. 54.86 X 122.17 mm 7,237 St. ₩♀

- Design contains a loose fill.
- Some white areas shown are not stitched.

- L Design is larger than 5" (127 mm) in either direction.
- S Design is smaller than 1.5" (38.1 mm) in either direction.



PACK 12367 • 20 DESIGNS

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.



HG848_48 Snowflake 1 3.94 X 4.37 in. 100.08 X 111.00 mm 11,907 St.



HG849_48 Snowflake 2 2.79 X 3.22 in. 70.87 X 81.79 mm 5,413 St. •




HG850_48 Snow Glistening 3.58 X 1.52 in. 90.93 X 38.61 mm 2,092 St. ♥

HG851_48 Winter 3.46 X 1.05 in. 87.88 X 26.67 mm 1,957 St. ♥ S



HG852_48 Winter House Appliqué 3.40 X 5.51 in. 86.36 X 139.95 mm


9,703 St. **₩**♡ L

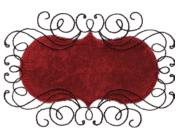

HG853_48 Appliqué Blank Patch 1 4.29 X 2.93 in. 108.97 X 74.42 mm 3,512 St. ♥



HG854_48 Appliqué Blank Patch 2 4.09 X 6.42 in. 103.89 X 163.07 mm 9,961 St. ♀ L

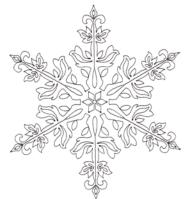

Snowflake 8.16 X 9.42 in. 207.26 X 239.27 mm 12,198 St. ○ L

HG855_48 Jumbo Linework

NOTE: Appliqué fabric not included.

- Besign contains a loose fill.
- Some white areas shown are not stitched.

- Design is larger than 5" (127 mm) in either direction.
- S Design is smaller than 1.5" (38.1 mm) in either direction.



WINTER FILIGREE


PACK 12367 • 20 DESIGNS

Listings below indicate color sample, stitching order and suggested thread color number in Isacord, YLI Fine Metallic, Yenmet or YLI Variegated threads.

HG836_48 Appliqué Cardinal	HG841_48 Jingle Bells Appliqué	HG848_48 Snowflake 1
1. Black Details	1. Metal Loops 0131	Single Color Design 0020
2. Placement Stitch0015	2. Ribbon	
3. Tackdown1903	3. Placement Stitch	HG849_48 Snowflake 2
4. White Linework	4. Tackdown0131	1. Single Color Design
	5. White Linework	0
HG837_48 Appliqué Deer	6. Black Details	HG850_48 Snow Glistening
1. Black Details		1. Single Color Design
2. Snow	HG842_48 Appliqué Tree	3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3
3. Placement Stitch	1. Placement Stitch	HG851 48 Winter
4. Tackdown	2. Tackdown	1. Single Color Design0131
5. White Linework	3. Black Details	cg.c colo. 2 colg
C. White Entertain	0. Diddit Dotallo	HG852_48 Winter House Appliqué
HG838_48 Ice Skates Appliqué	HG843_48 Appliqué Trees	1. Placement Stitch
■ 1. Black Details	1. Placement Stitch	2. Tackdown
Didok Botano	2. Left Tackdown	3. White Details
3. Tackdown & Red Linework	3. Right Tackdown	4. Black Details
4. White Linework	4. Black Details	— 4. Black Details
4. White Enework	— 4. Black Details	HG853_48 Appliqué Blank Patch 1
LIC020 40 Mittage Appliqué	HG844 48 Element 1	1. Placement Stitch
HG839_48 Mittens Appliqué 1. Black Details	■ 1. Single Color Design0020	2. Tackdown
	1. Siligle Color Design	3. Black Details
2. Placement Stitch	HG845_48 Element 2	3. DidCk Details
	-	IICOF4 40 A 1' / DI 1 D . 1 O
4. White Linework0015	1. Single Color Design 0020	HG854_48 Appliqué Blank Patch 2
110040 40 4 41 401 1	TYCOAC 40 FB	1. Placement Stitch
HG840_48 Appliqué Sled	HG846_48 Element 3	2. Tackdown
1. Black Details	1. Single Color Design0020	3. White Details0015
2. Placement Stitch		
3. Tackdown1903	HG847_48 Element 4	HG855_48 Jumbo Linework Snowflake
	Single Color Design	1. Single Color Design0020


IMPORTANT:

When printing this document, the "Fit to page" option must be UNCHECKED or the "Page Scaling" option must be set to NONE depending on your printers options. If this option is set incorrectly, the prints will not work correctly as patterns because they will not print at actual size.

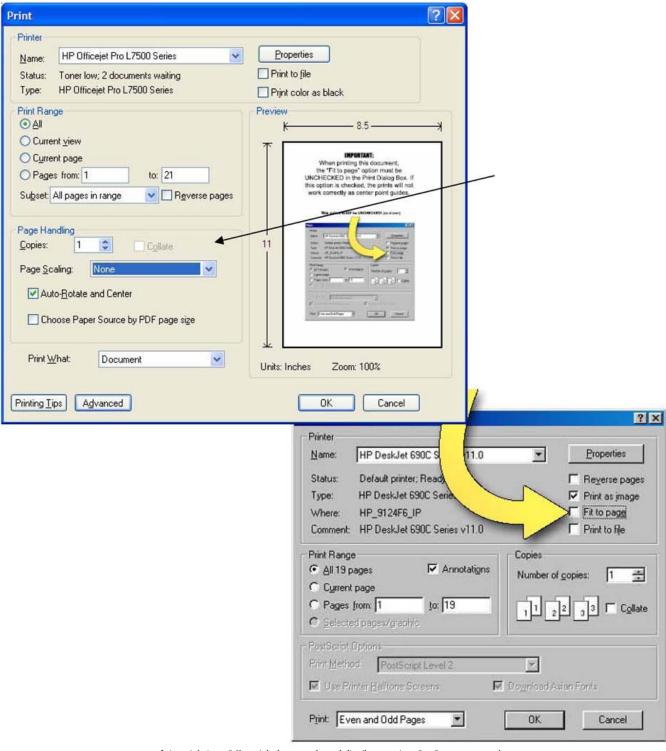




Appliqué Patterns

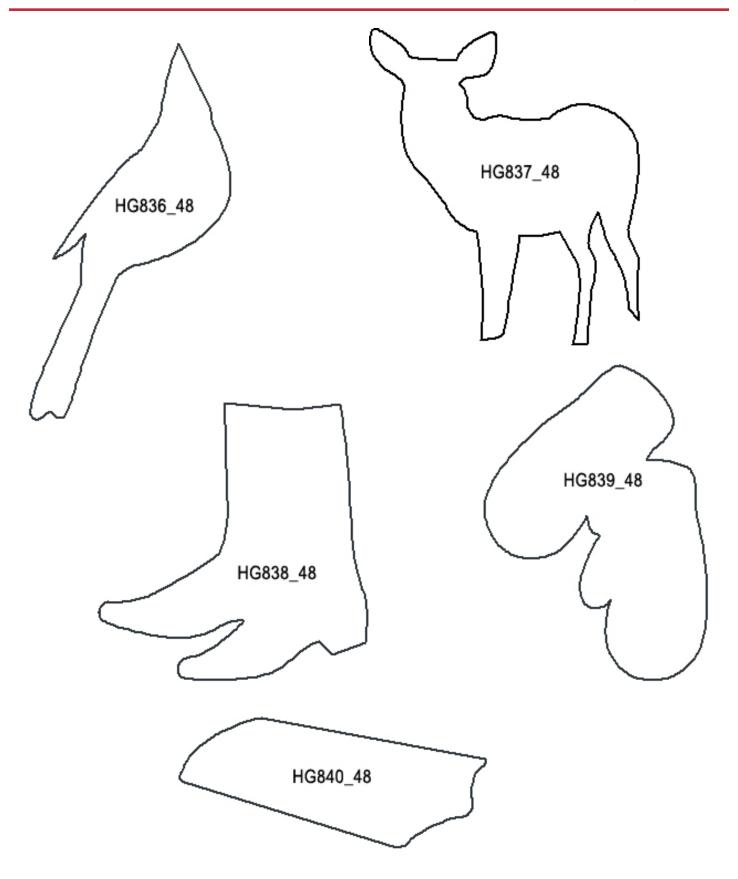


It is a violation of Copyright law to make and distribute copies of software or artwork. Software is licensed to the original purchaser for use at one location. ©2011 OESD, LLC. All rights reserved.



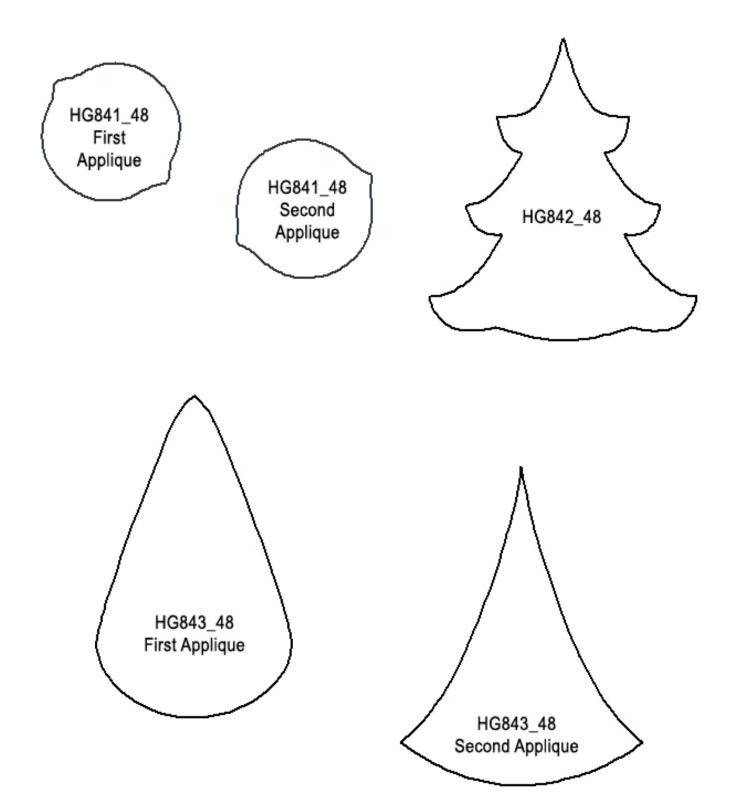




Appliqué Patterns

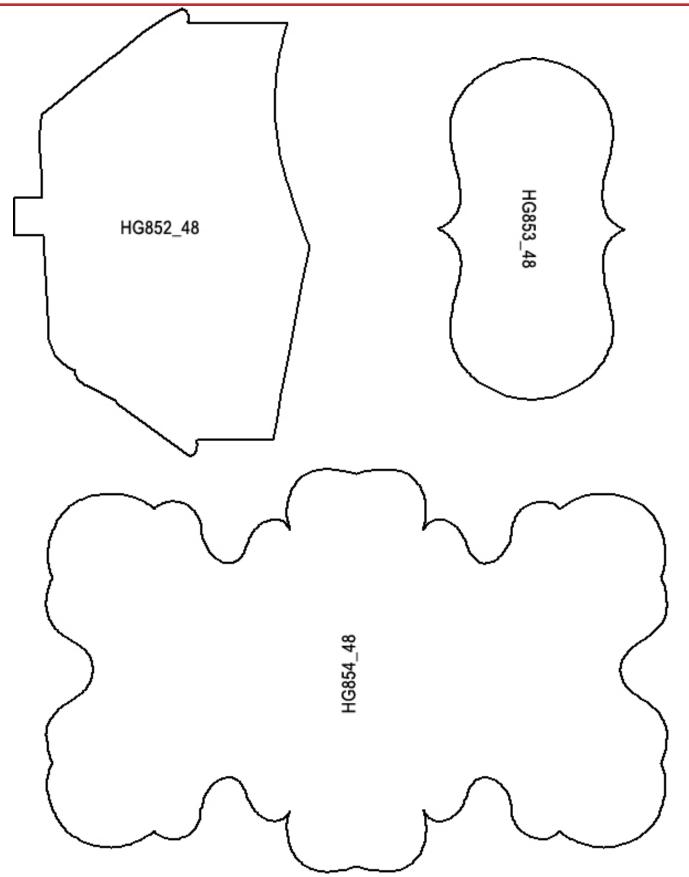




WINTER FILIGREE

PRE-CUT APPLIQUÉ FILES FOR USE WITH BERNINA© CUTWORK ACCESSORY

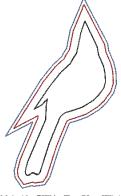

HG836_48_CWA For Use With the Bernina CutWork Accessory

2.80 X 4.77 in. 71.12 X 121.16 mm 4,503 St.

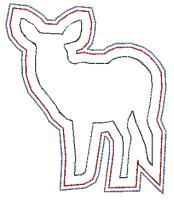


HG837_48_CWA For Use With the Bernina CutWork Accessory

3.28 X 3.86 in. 83.31 X 98.04 mm 4,076 St.




HG838_48_CWA For Use With the Bernina CutWork Accessory

3.28 X 3.44 in. 83.31 X 87.38 mm 2,939 St.

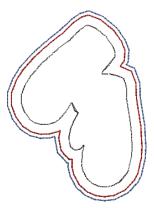


HG839_48_CWA For Use With the Bernina CutWork Accessory

2.80 X 3.82 in. 71.12 X 97.03 mm 2,705 St.

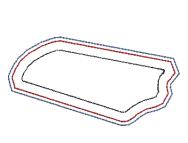


HG840_48_CWA For Use With the Bernina CutWork Accessory

3.71 X 1.88 in. 94.23 X 47.75 mm 2,113 St.

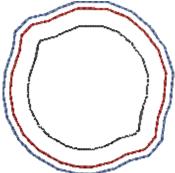


HG841_48_CWA01 For Use With the Bernina CutWork Accessory

1.94 X 1.94 in. 49.28 X 49.28 mm 1,382 St.

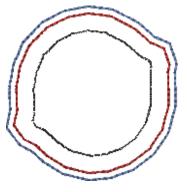


HG841_48_CWA02 For Use With the Bernina CutWork Accessory

1.95 X 1.97 in. 49.53 X 50.04 mm 1,399 St.

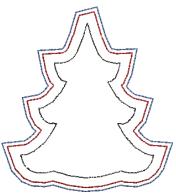


HG842_48_CWA For Use With the Bernina CutWork Accessory

3.46 X 3.72 in. 87.88 X 94.49 mm 3,200 St.

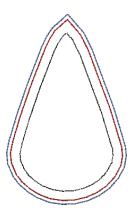


HG843_48_CWA01 For Use With the Bernina CutWork

Accessory 2.53 X 3.97 in. 64.26 X 100.84 mm 2,467 St.

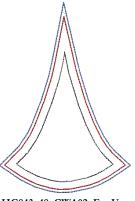


HG843_48_CWA02 For Use With the Bernina CutWork Accessory

3.33 X 4.81 in. 84.58 X 122.17 mm 2,767 St.

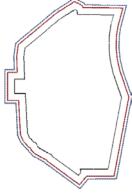


HG852_48_CWA For Use With the Bernina CutWork

Accessory 3.56 X 5.30 in. 90.42 X 134.62 mm 3,526 St. L

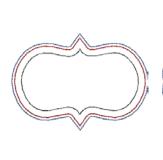

HG853_48_CWA For Use With the Bernina CutWork

Accessory 4.00 X 2.80 in. 101.60 X 71.12 mm 2,932 St.

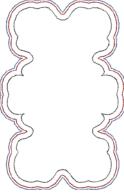

HG854_48_CWA For Use With the Bernina CutWork Accessory

4.64 X 6.97 in. 117.86 X 177.04 mm 6,733 St. L

It is a violation of Copyright law to make and distribute copies of software or artwork. Software is licensed to the original purchaser for use at one location. ©2011 OESD, LLC. All rights reserved.



WINTER FILIGREE

PRE-CUT APPLIQUÉ FILES FOR USE WITH BERNINA© CUTWORK ACCESSORY

NOTE: Placement Stitch and Basting Stitch should match your background fabric.

HG841_48_CWA01 For Use With the Bernina	HG843_48_CWA02 For Use With the Bernina
CutWork Accessory	CutWork Accessory
1. Placement Stitch3600	1. Placement Stitch3600
2. Basting Stitch1902	2. Basting Stitch1902
3. Bernina CutWork Accessory Cut 1 Cut 1	3. Bernina CutWork Accessory Cut 1 Cut 1
4. Bernina CutWork Accessory Cut 2 Cut 2	4. Bernina CutWork Accessory Cut 2 Cut 2
5. Bernina CutWork Accessory Cut 3 Cut 3	5. Bernina CutWork Accessory Cut 3 Cut 3
■ 6. Bernina CutWork Accessory Cut 4Cut 4	■ 6. Bernina CutWork Accessory Cut 4Cut 4
HG841_48_CWA02 For Use With the Bernina	HG852_48_CWA For Use With the Bernina
CutWork Accessory	CutWork Accessory
1. Placement Stitch3600	1. Placement Stitch3600
2. Basting Stitch	2. Basting Stitch
3. Bernina CutWork Accessory Cut 1 Cut 1	3. Bernina CutWork Accessory Cut 1Cut 1
4. Bernina CutWork Accessory Cut 2 Cut 2	4. Bernina CutWork Accessory Cut 2 Cut 2
5. Bernina CutWork Accessory Cut 3 Cut 3	5. Bernina CutWork Accessory Cut 3 Cut 3
■ 6. Bernina CutWork Accessory Cut 4Cut 4	6. Bernina CutWork Accessory Cut 4Cut 4
HG842_48_CWA For Use With the Bernina	HG853_48_CWA For Use With the Bernina
CutWork Accessory	CutWork Accessory
	1. Placement Stitch3600
	2. Basting Stitch1902
	3. Bernina CutWork Accessory Cut 1Cut 1
	 4. Bernina CutWork Accessory Cut 2Cut 2
•	5. Bernina CutWork Accessory Cut 3 Cut 3
■ 6. Bernina CutWork Accessory Cut 4 Cut 4	6. Bernina CutWork Accessory Cut 4 Cut 4
HG843_48_CWA01 For Use With the Bernina	HG854_48_CWA For Use With the Bernina
CutWork Accessory	CutWork Accessory
	1. Placement Stitch3600
2. Basting Stitch1902	2. Basting Stitch1902
3. Bernina CutWork Accessory Cut 1 Cut 1	3. Bernina CutWork Accessory Cut 1Cut 1
4. Bernina CutWork Accessory Cut 2 Cut 2	4. Bernina CutWork Accessory Cut 2 Cut 2
 Bernina CutWork Accessory Cut 3Cut 3 	5. Bernina CutWork Accessory Cut 3 Cut 3
■ 6. Bernina CutWork Accessory Cut 4Cut 4	Bernina CutWork Accessory Cut 4Cut 4
	CutWork Accessory 1. Placement Stitch

NOTE: Appliqué fabric not included.



MAKING PRECUT APPLIQUÉ USING BERNINA[®] CUTWORK ACCESSORY

SUPPLIES

- Cut-Away Stabilizer
- Temporary Spray Adhesive
- Appliqué Fuse & Fix Stabilizer
- Embroidery Thread
- Stabilizer that is appropriate for your project
- BERNINA® CutWork Accessory

PREPARE APPLIQUE FABRIC

- 1. Starch appliqué fabric 2-3 times following manufacturer's instructions.
- 2. Appliqué fabric should be crisp.
- 3. Iron Appliqué Fuse & Fix to the wrong side of the starched appliqué fabric following instructions on product packaging.

CUT APPLIQUÉ PIECES

- 1. Hoop one layer of Cut-Away Stabilizer.
- 2. Send first CWA file to the embroidery machine. (CWA files are the pre-cut appliqué files to use with the CutWork Accessory; these files will end in CWA01, CWA02, and CWA03 etc. The number of CWA files available for each design will depend upon how many separate appliqués each design contains.)
- 3. Stitch the first color, this will be the placement stitch.
- 4. Remove the hoop from the machine but do not remove the stabilizer from the hoop. Spray the hooped stabilizer with temporary spray adhesive. Lay prepared appliqué fabric over the placement stitch, being sure to completely cover the stitching. Apply pressure to appliqué fabric to ensure it is adhered.
- 5. Stitch the second color, this will be the basting stitch. It is meant to baste the appliqué fabric to your hooped stabilizer.
- 6. Replace normal stitch plate with the CutWork stitch plate.
- 7. Unthread the machine.
- 8. If necessary, turn off the upper thread control on your machine. Refer to your machine's user manual. Note that the most recent version of the 830 will perform this task automatically.
- 9. Replace embroidery needle with the CutWork Accessory.
- 10. Replace embroidery foot with foot #44 (If you do not have foot #44 you can leave foot #15 on the machine; foot #44 will simply keep the cut fabric from flagging as much).
- 11. Attach the hoop to the machine.
- 12. To cut the first appliqué piece follow the "thread changes" on your machine screen and turn the dial on the CutWork tool as required.
- 13. Remove the hoop from the machine.
- Gently remove cut appliqué piece, trimming any thread that may have not been cut completely.
 PHOTO 1
- 15. Repeat as needed for designs with multiple appliqué pieces.



TACKDOWN APPLIOUÉ AND COMPLETE EMBROIDERY DESIGN

- 1. Replace the embroidery needle and rethread the machine.
- 2. Replace the embroidery foot #15.
- 3. Spray hoop sized piece of stabilizer that is appropriate for your project and adhere to wrong side of background fabric or project that is to be hooped.
- 4. Hoop fabric/project and stabilizer.
- 5. Attach hoop to machine.
- 6. Send the embroidery file to the machine (this is not a CWA file).
- 7. Stitch design as normal following the thread changes on the provided thread chart stopping after each Appliqué Placement Stitch.



MAKING PRECUT APPLIQUÉ USING BERNINA® CUTWORK ACCESSORY

- 1. After stitching an Appliqué Placement Stitch, take the precut appliqué pieces required and peel off the cutaway backing and the release paper revealing a sticky backing. **PHOTO 2**
- 2. Remove hoop from machine, but do not remove the fabric from the hoop.
- Adhere precut appliqué piece evenly over the Appliqué Placement Stitch; use pressure to make sure pieces stick well. PHOTO 3
- 4. Reattach hoop to machine.
- 5. Continue stitching design until all appliqué pieces are placed and all stitching is complete. **PHOTO 4**

NOTE: Design pictured is for instructional purposes and may not be included in this collection.

