

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.




12385-01 Appliqué Bunny
3.58 X 2.77 in.
90.93 X 70.36 mm
3,293 St. ❁



12385-02 Appliqué Butterfly
3.71 X 3.23 in.
94.23 X 82.04 mm
6,458 St.



12385-03 Appliqué Frog
2.82 X 3.33 in.
71.63 X 84.58 mm
4,316 St. ❁

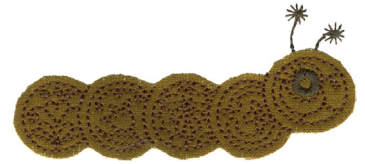

12385-04 Appliqué Caterpillar
3.26 X 1.50 in.
82.80 X 38.10 mm
2,112 St.



12385-05 Appliqué Ladybug
1.45 X 1.78 in.
36.83 X 45.21 mm
1,187 St. ❁ S



12385-06 Appliqué Leaf With Swirls
3.37 X 3.19 in.
85.60 X 81.03 mm
2,095 St. ❁



12385-07 Appliqué Leaf
1.90 X 3.58 in.
48.26 X 90.93 mm
2,226 St. ❁



12385-08 Appliqué Purple Flower
3.44 X 3.71 in.
87.38 X 94.23 mm
11,854 St. ❁



12385-09 Appliqué Red Flower
1.99 X 2.29 in.
50.55 X 58.17 mm
2,050 St.



12385-10 Appliqué Snail
2.88 X 1.81 in.
73.15 X 45.97 mm
3,885 St.



12385-11 Appliqué Toadstool
2.80 X 3.70 in.
71.12 X 93.98 mm
2,234 St.




12385-12 Linework Border
4.40 X 1.25 in.
111.76 X 31.75 mm
974 St. ❁ S

❁ Design contains a loose fill.
❁ Some white areas shown are not stitched.

L Design is larger than 5" (127 mm) in either direction.
S Design is smaller than 1.5" (38.1 mm) in either direction.

Note: Some designs in this collection may have been created using unique special stitches and/or techniques. To preserve design integrity when rescaling or rotating designs in your software, always rescale or rotate designs using the handles directly on-screen.

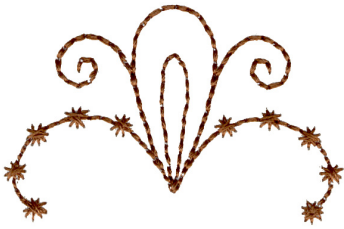

12385-13 Linework Corner
1.87 X 1.21 in.
47.50 X 30.73 mm
545 St. ⚡ S




12385-14 Linework Flowers
3.51 X 3.95 in.
89.15 X 100.33 mm
4,693 St. ⚡



12385-15 Linework Grass Accent
2.29 X 3.46 in.
58.17 X 87.88 mm
1,418 St. ⚡



12385-16 Linework Leaf Accent
1.76 X 1.65 in.
44.70 X 41.91 mm
869 St. ⚡

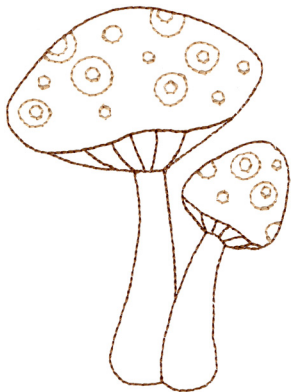

12385-17 Linework Toadstools
3.00 X 4.12 in.
76.20 X 104.65 mm
2,133 St. ⚡

⚡ Design contains a loose fill.
⚡ Some white areas shown are not stitched.

L Design is larger than 5" (127 mm) in either direction.
S Design is smaller than 1.5" (38.1 mm) in either direction.

Listings below indicate color sample, stitching order and suggested thread color number in Isacord thread.

2385-01 Appliqué Bunny

| | |
|-----------------------------|------|
| □ 1. Placement Stitch | 0015 |
| ■ 2. Tackdown | 0651 |
| ■ 3. Dark Linework | 0842 |
| ■ 4. Light Linework | 0651 |

12385-02 Appliqué Butterfly

| | |
|-----------------------------|------|
| □ 1. Placement Stitch | 0015 |
| ■ 2. Tackdown | 2650 |
| ■ 3. Linework | 2650 |
| ■ 4. Body | 2764 |

12385-03 Appliqué Frog

| | |
|-----------------------------|------|
| □ 1. Placement Stitch | 0015 |
| ■ 2. Tackdown | 5555 |
| ■ 3. Light Linework | 5822 |
| ■ 4. Dark Linework | 5555 |
| □ 5. Eye | 0015 |

12385-04 Appliqué Caterpillar

| | |
|------------------------------|------|
| □ 1. Placement Stitch | 0015 |
| ■ 2. Tackdown Linework | 0465 |
| ■ 3. Antennae & Eye | 5555 |

12385-05 Appliqué Ladybug

| | |
|-----------------------------|------|
| □ 1. Placement Stitch | 0015 |
| □ 2. Tackdown | 0015 |
| ■ 3. Black Linework | 0020 |
| □ 4. White Spots | 0015 |

12385-06 Appliqué Leaf With Swirls

| | |
|--------------------------------|------|
| □ 1. Placement Stitch | 0015 |
| ■ 2. Tackdown | 5822 |
| ■ 3. Light Leaf Linework | 5822 |
| ■ 4. Stems & Dark Leaf | 5555 |

12385-07 Appliqué Leaf

| | |
|-----------------------------|------|
| □ 1. Placement Stitch | 0015 |
| ■ 2. Tackdown | 5555 |
| ■ 3. Linework | 5555 |
| ■ 4. Stem | 0442 |

12385-08 Appliqué Purple Flower

| | |
|-----------------------------|------|
| ■ 1. Flower | 2711 |
| ■ 2. Flower Outlines | 2650 |
| □ 3. Placement Stitch | 0015 |
| ■ 4. Tackdown | 0651 |
| ■ 5. Stamen Linework | 0651 |

12385-09 Appliqué Red Flower

| | |
|-----------------------------|------|
| □ 1. Placement Stitch | 0015 |
| ■ 2. Tackdown | 1761 |
| ■ 3. Linework | 1761 |

12385-10 Appliqué Snail

| | |
|-----------------------------|------|
| ■ 1. Body | 0771 |
| □ 2. Eye | 0015 |
| □ 3. Placement Stitch | 0015 |
| ■ 4. Tackdown | 0731 |
| ■ 5. Linework | 0731 |

12385-11 Appliqué Toadstool

| | |
|-----------------------------|------|
| □ 1. Placement Stitch | 0015 |
| ■ 2. Tackdown | 0651 |
| ■ 3. Linework | 0651 |

12385-12 Linework Border

| | |
|--------------------------------|------|
| ■ 1. Single Color Design | 1055 |
|--------------------------------|------|

12385-13 Linework Corner

| | |
|--------------------------------|------|
| ■ 1. Single Color Design | 1055 |
|--------------------------------|------|

12385-14 Linework Flowers

| | |
|--------------------------------|------|
| ■ 1. Single Color Design | 1600 |
|--------------------------------|------|

12385-15 Linework Grass Accent

| | |
|--------------------------------|------|
| ■ 1. Single Color Design | 0453 |
|--------------------------------|------|

12385-16 Linework Leaf Accent

| | |
|--------------------------------|------|
| ■ 1. Single Color Design | 0453 |
|--------------------------------|------|

12385-17 Linework Toadstools

| | |
|---------------------------------|------|
| ■ 1. Dark Brown Linework | 1055 |
| ■ 2. Light Brown Linework | 0934 |



Note: Appliqué fabric not included.

Pre-Cut Appliqué Instructions

1. Print out the necessary pages from the PDF of the appliqué pattern(s).
2. Mark the right side of the pattern pieces so you'll know which direction to lay the pattern on the fabric.
3. Lightly spray the wrong side of the pattern pieces with temporary adhesive spray and allow it to set for a few minutes.
4. Place the pattern pieces on the right side of the fabric and carefully cut them out. **PHOTO 1**
5. Sew the placement stitch on your hooped fabric. **PHOTO 2**
6. With the paper still stuck to the right side of the appliqué fabric, spray the wrong side of the fabric with temporary spray adhesive.
7. Place the fabric inside the sewing placement stitch so that it matches the stitching line then remove the paper pattern. **PHOTO 3**
8. Sew the tackdown. **PHOTO 4**
9. Sew the remainder of the design and repeat for any remaining pieces. **PHOTO 5**


NOTE: The patterns are sized for the designs as they were made. If you resize the design, you will need to resize the pattern the same amount. You can print out the pattern at the normal size then copy it on a copy machine at the changed size, i.e. resize the designs to 80%, resize the printed pattern to 80%.

TIP: When Printing the patterns, make sure that the "Fit to page" option is UNCHECKED in the Print Dialog Box. If this option is checked the printed patterns will not be actual size.

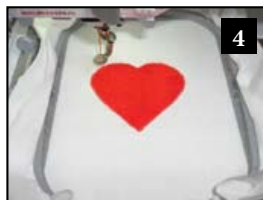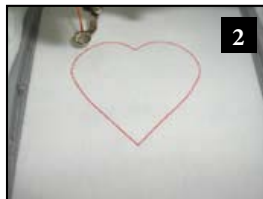


ATTENTION






When printing this document, any page scaling or page fitting options in your print dialog box must be turned OFF or set to NONE so that your files will print out at their actual size. Images not printed at actual size will not function as intended.



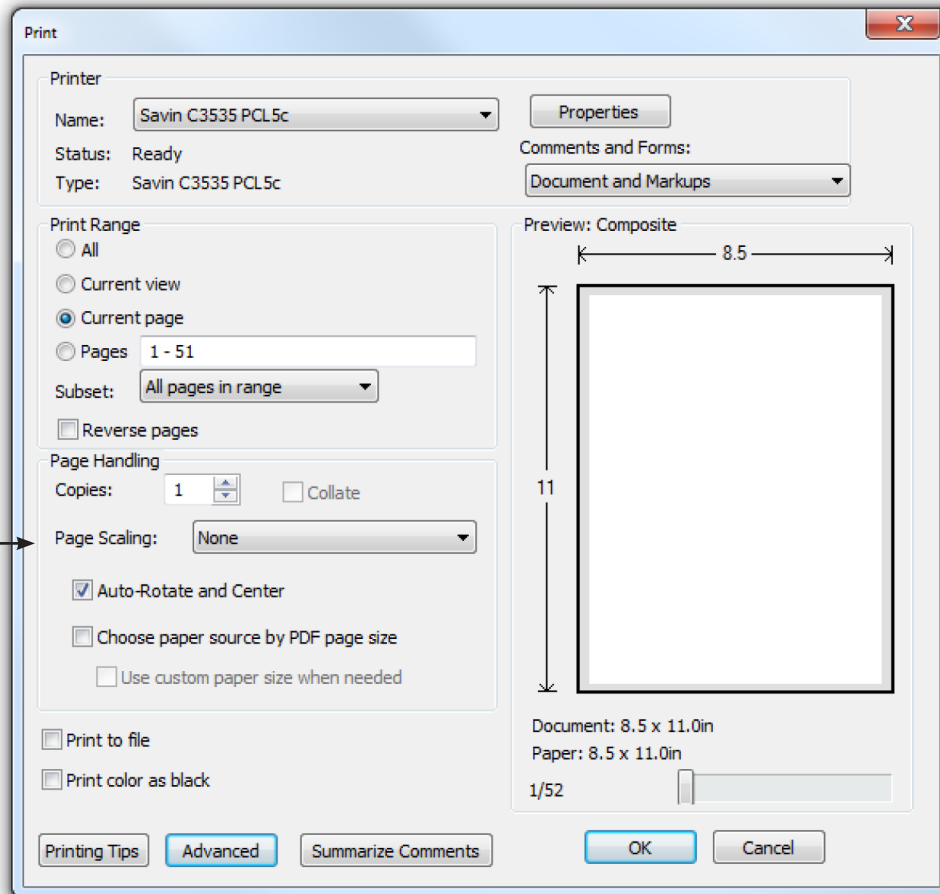



TO SAVE PAPER

Only print the desired image by navigating to the image's page, go to File > Print and select "Current page" in the print dialog box. Repeat for each desired image.

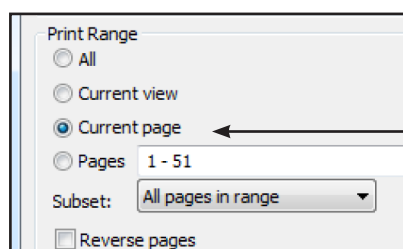


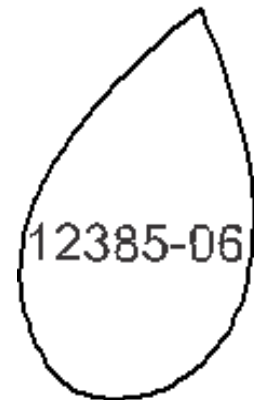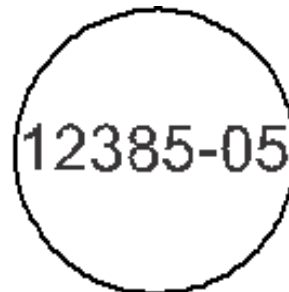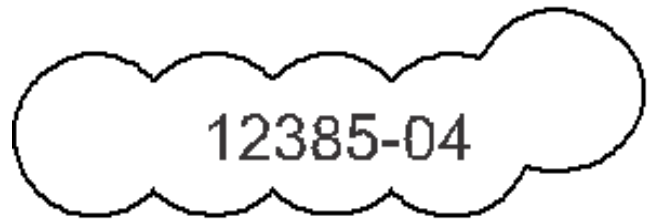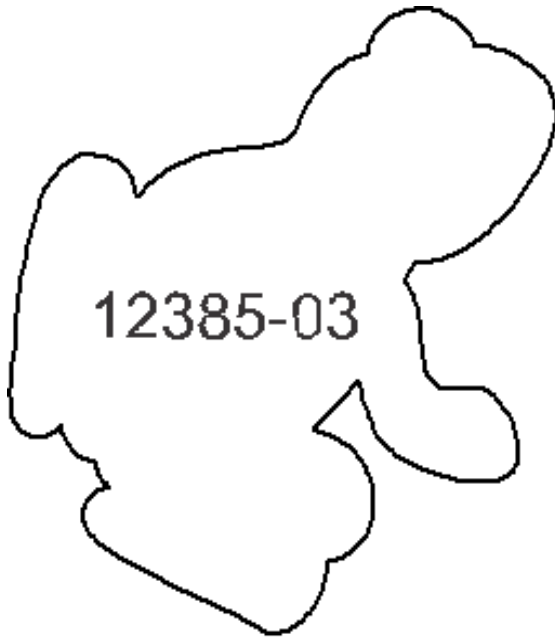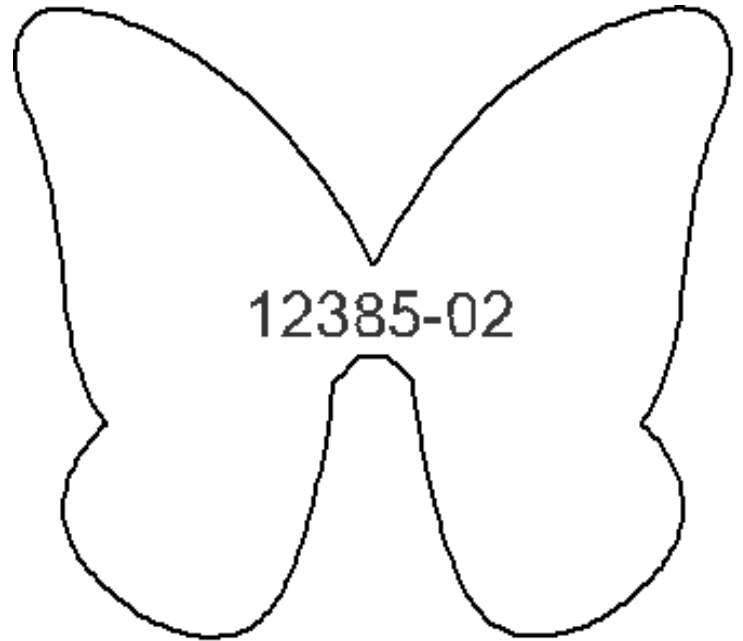

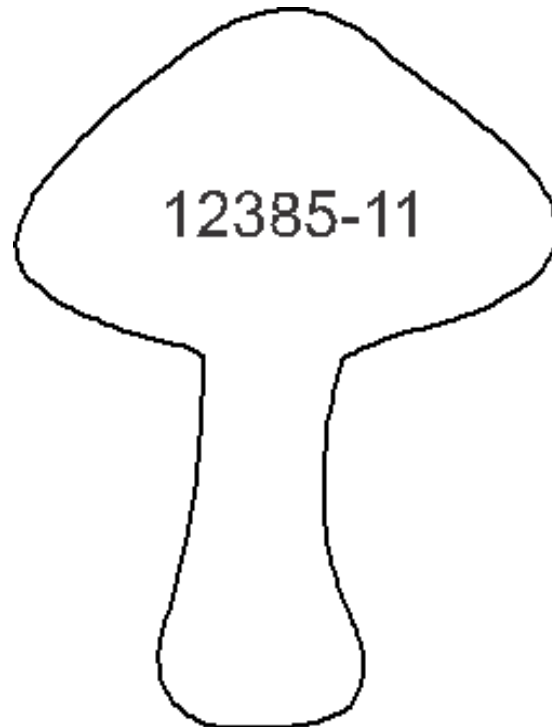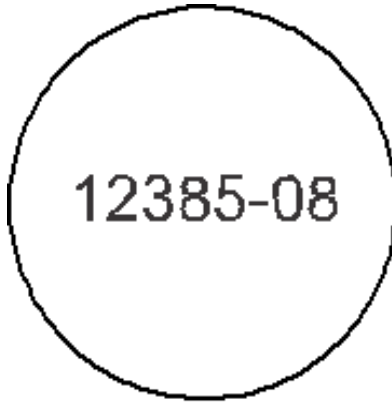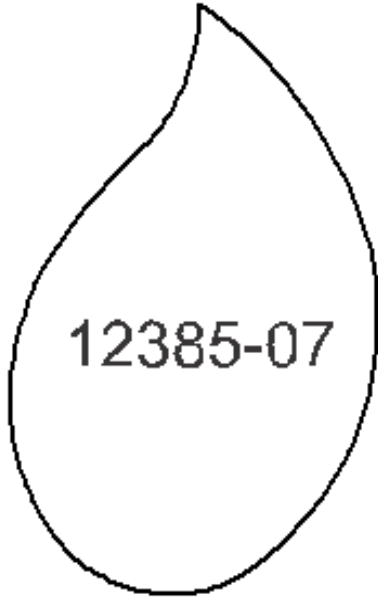


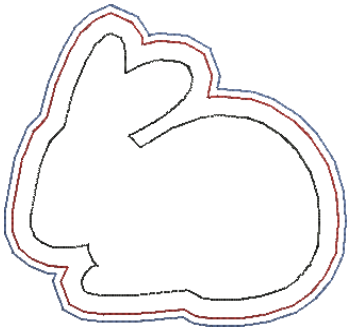


12385-01_CWA For Use With the
Bernina CutWork Accessory
3.59 X 3.35 in.
91.19 X 85.09 mm
2,332 St.

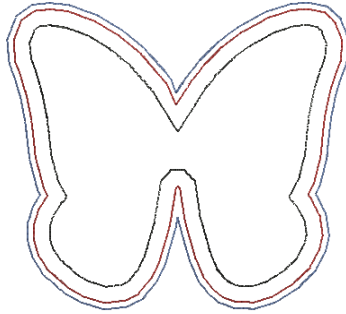


12385-02_CWA For Use With the
Bernina CutWork Accessory
4.27 X 3.79 in.
108.46 X 96.27 mm
3,264 St.

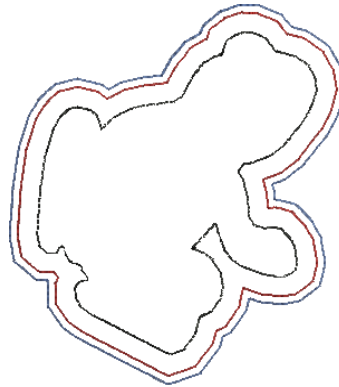


12385-03_CWA For Use With the
Bernina CutWork Accessory
3.38 X 3.79 in.
85.85 X 96.27 mm
2,548 St.

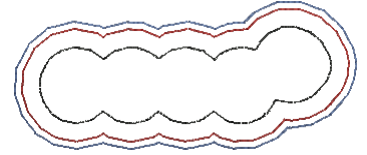


12385-04_CWA For Use With the
Bernina CutWork Accessory
3.82 X 1.62 in.
97.03 X 41.15 mm
1,760 St.

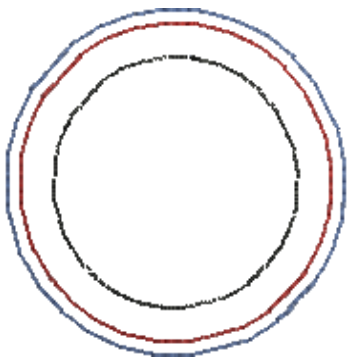


12385-05_CWA For Use With the
Bernina CutWork Accessory
1.98 X 2.00 in.
50.29 X 50.80 mm
1,035 St.

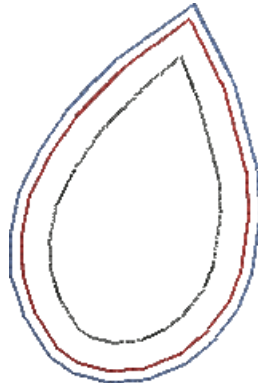


12385-06_CWA For Use With the
Bernina CutWork Accessory
1.76 X 2.64 in.
44.70 X 67.06 mm
778 St.

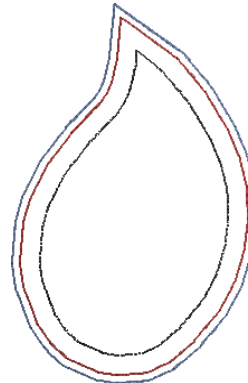


12385-07_CWA For Use With the
Bernina CutWork Accessory
2.45 X 3.78 in.
62.23 X 96.01 mm
1,668 St.

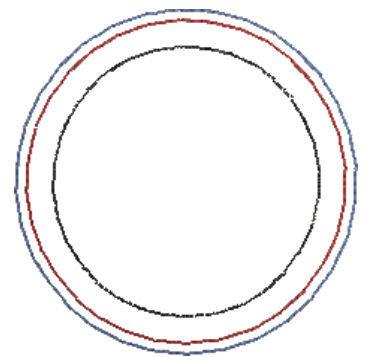


12385-08_CWA For Use With the
Bernina CutWork Accessory
2.55 X 2.56 in.
64.77 X 65.02 mm
1,356 St.

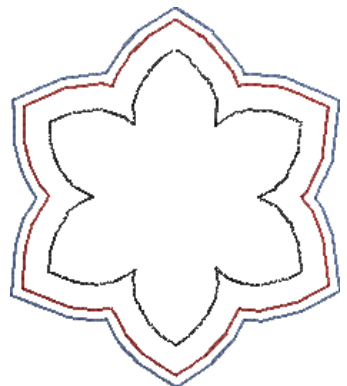

12385-09_CWA For Use With the
Bernina CutWork Accessory
2.57 X 2.94 in.
65.28 X 74.68 mm
1,848 St.

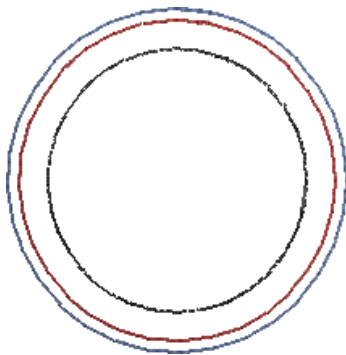

12385-10_CWA For Use With the
Bernina CutWork Accessory
2.35 X 2.36 in.
59.69 X 59.94 mm
1,240 St.

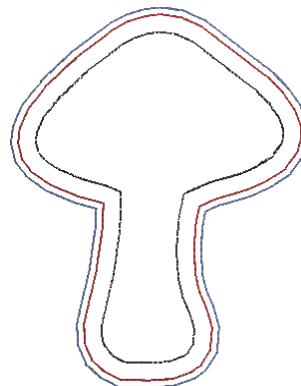

12385-11_CWA For Use With the
Bernina CutWork Accessory
3.35 X 4.25 in.
85.09 X 107.95 mm
2,321 St.

NOTE: Placement Stitch and Basting Stitch should match your background fabric.

12385-01_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-02_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-03_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-04_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-05_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-06_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-07_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-08_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-09_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-10_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

12385-11_CWA For Use With the Bernina CutWork Accessory

| | |
|---|-------|
| ■ 1. Placement Stitch | 3600 |
| ■ 2. Basting Stitch | 1902 |
| ■ 3. Bernina CutWork Accessory Cut 1..... | Cut 1 |
| ■ 4. Bernina CutWork Accessory Cut 2..... | Cut 2 |
| ■ 5. Bernina CutWork Accessory Cut 3..... | Cut 3 |
| ■ 6. Bernina CutWork Accessory Cut 4..... | Cut 4 |

SUPPLIES

- Cut-Away Stabilizer
- Temporary Spray Adhesive
- Appliqué Fuse & Fix Stabilizer
- Embroidery Thread
- Stabilizer that is appropriate for your project
- BERNINA® CutWork Accessory

PREPARE APPLIQUE FABRIC

1. Starch appliqué fabric 2-3 times following manufacturer's instructions.
2. Appliqué fabric should be crisp.
3. Iron Appliqué Fuse & Fix to the wrong side of the starched appliqué fabric following instructions on product packaging.

CUT APPLIQUE PIECES

1. Hoop one layer of Cut-Away Stabilizer.
2. Send first CWA file to the embroidery machine. (CWA files are the pre-cut appliqué files to use with the CutWork Accessory; these files will end in CWA01, CWA02, and CWA03 etc. The number of CWA files available for each design will depend upon how many separate appliqué designs each design contains.)
3. Stitch the first color, this will be the placement stitch.
4. Remove the hoop from the machine but do not remove the stabilizer from the hoop. Spray the hooped stabilizer with temporary spray adhesive. Lay prepared appliqué fabric over the placement stitch, being sure to completely cover the stitching. Apply pressure to appliqué fabric to ensure it is adhered.
5. Stitch the second color, this will be the basting stitch. It is meant to baste the appliqué fabric to your hooped stabilizer.
6. Replace normal stitch plate with the CutWork stitch plate.
7. Unthread the machine.
8. If necessary, turn off the upper thread control on your machine. Refer to your machine's user manual. Note that the most recent version of the 830 will perform this task automatically.
9. Replace embroidery needle with the CutWork Accessory.
10. Replace embroidery foot with foot #44 (If you do not have foot #44 you can leave foot #15 on the machine; foot #44 will simply keep the cut fabric from flagging as much).
11. Attach the hoop to the machine.
12. To cut the first appliqué piece follow the "thread changes" on your machine screen and turn the dial on the CutWork tool as required.
13. Remove the hoop from the machine.
14. Gently remove cut appliqué piece, trimming any thread that may have not been cut completely. **PHOTO 1**
15. Repeat as needed for designs with multiple appliqué pieces.

TACKDOWN APPLIQUE AND COMPLETE EMBROIDERY DESIGN

1. Replace the embroidery needle and rethread the machine.
2. Replace the embroidery foot #15.
3. Spray hoop sized piece of stabilizer that is appropriate for your project and adhere to wrong side of background fabric or project that is to be hooped.
4. Hoop fabric/project and stabilizer.
5. Attach hoop to machine.
6. Send the embroidery file to the machine (this is not a CWA file).
7. Stitch design as normal following the thread changes on the provided thread chart stopping after each Appliqué Placement Stitch.
8. After stitching an Appliqué Placement Stitch, take the precut appliqué pieces required and peel off the cutaway backing and the release paper revealing a sticky backing. **PHOTO 2**
9. Remove hoop from machine, but do not remove the fabric from the hoop.
10. Adhere precut appliqué piece evenly over the Appliqué Placement Stitch; use pressure to make sure pieces stick well. **PHOTO 3**
11. Reattach hoop to machine.
12. Continue stitching design until all appliqué pieces are placed and all stitching is complete. **PHOTO 4**

NOTE: Design pictured is for instructional purposes and may not be included in this collection.

